

## DENON AVR Reset – Initialization Procedure

| Model  | Mode   | Button A         | Button B          | Button C | Procedure  |
|--|--|------------------|-------------------|----------|--|
| <a href="#">AVR-X7200W</a><br><a href="#">AVR-X6200W</a><br><a href="#">AVR-X5200W</a><br><a href="#">AVR-X4200W</a><br><a href="#">AVR-X4100W</a><br><a href="#">AVR-4520CI</a><br><a href="#">AVR-X4000W</a><br><a href="#">AVR-3313CI</a>   | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | BACK             | INFO              | POWER    | With the power off, press and hold buttons until “INITIALIZED” is displayed.<br><br>With the power off, press and hold buttons until the display starts flashing at intervals of about 1 second. |
| <a href="#">AVR-X3200W</a><br><a href="#">AVR-X3100W</a><br><a href="#">AVR-X2200W</a><br><a href="#">AVR-X2100W</a><br><a href="#">AVR-X1200W</a><br><a href="#">AVR-X1100W</a><br><a href="#">AVR-X3000W</a><br><a href="#">AVR-2313CI</a><br><a href="#">AVR-2113CI</a><br><a href="#">AVR-X2000W</a><br><a href="#">AVR-X1000W</a> | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | TUNER PRESET CH- | TUNER PRESET CH+  | POWER    | With the power off, press and hold buttons until “INITIALIZED” is displayed.<br><br>With the power off, press and hold buttons until the display starts flashing at intervals of about 1 second. |
| <a href="#">AVR-S910W</a><br><a href="#">AVR-S900W</a><br><a href="#">AVR-S710W</a><br><a href="#">AVR-S700W</a>   | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | TUNER PRESET CH- | TUNER PRESET CH+  | POWER    | With the power off, press and hold buttons until “INITIALIZED” is displayed.   |
| <a href="#">AVR-S510BT</a><br><a href="#">AVR-S500BT</a>   |  | SOUND MODE ►     | TUNER PRESET CH + | POWER    | With the power off, press and hold buttons until the display starts flashing at intervals of about 1 second.   |
| <a href="#">AVR-1913</a><br><a href="#">AVR-1713</a><br><a href="#">AVR-1613</a><br><a href="#">AVR-1513</a><br><a href="#">AVR-E400</a><br><a href="#">AVR-E300</a><br><a href="#">AVR-E200</a>   |  | SOUND MODE ◀     | SOUND MODE ►      | POWER    | With the power off, press and hold buttons until the display starts flashing at intervals of about 1 second.   |

| Model   | Mode   | Button A         | Button B         | Button C | Procedure  |
|---|--|------------------|------------------|----------|--|
| AVR-3312CI<br>AVR-2312CI<br>AVR-2112CI<br>AVR-1912  | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | PRESET CHANNEL 2 | PRESET CHANNEL 3 | POWER    | With the power off, press and hold buttons until the display starts flashing at intervals of about 1 second. |
| AVR-1712<br>AVR-1612<br>AVR-1312  | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | ⏪                | ⏩                | POWER    |  |
| AVR-5803A-CI  | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | STANDARD         | HOME THX CINEMA  | POWER    |  |
| AVR-4810CI<br>AVR-4311CI<br>AVR-3311CI  | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | STANDARD         | DSP SIMULATION   | POWER    |  |
| AVR-2311CI<br>AVR-1911<br>AVR-1611<br>AVR-991<br>AVR-891<br>AVR-791<br>AVR-591<br>AVR-391 | <b>User Initialization Mode</b><br>(Settings for the Installer Setup are not initialized.) | SURROUND MODE ▶  | SURROUND MODE ◀  | POWER    |  |