



omni [📶]S2 RECHARGEABLE

Wireless Speaker.
Unparalleled Sound.



OMNI S2 RECHARGEABLE

Wireless Speaker. Unparalleled Sound.

The Omni S2 Rechargeable offers a portable solution for taking Polk’s widely respected signature sound wirelessly to places without power, like on the patio or by the pool. The S2 Rechargeable is made of rugged ABS and has a lithium-ion battery, enabling it to play up to 100 yards from your wireless router, even outdoors. The battery will drive the speaker for up to 10 hours on a full charge at moderate listening levels. The S2 Rechargeable is weather resistant and ruggedized for casual outdoor use. Infrequent and or accidental rain and sun exposure should not harm the S2 Rechargeable.

Contents

What’s in the Box	3
Getting Started	3
Portability	3
Battery Life	4
Connecting Your S2 Rechargeable	4
Playing Music	5
Specifications	6
Technical Assistance & Contact	6

The Polk Omni Collection


Your S2 Rechargeable wireless speaker is part of the Polk Omni Collection, the First Great-Sounding Wireless Music System™. The S2 Rechargeable can be used as a stand-alone wireless speaker or as part of a family.

With the Omni Collection, you can effortlessly enjoy Polk’s signature sound anywhere or everywhere in your home; Start with one and then add throughout your home. Stream your favorite music services, internet radio and your personal digital music library all from your smartphone, tablet or computer.

And because you can mix and match speakers with the open DTS Play-Fi® technology standard, future-proofing your technology has never been easier. Equipped with Polk’s widely respected signature sound and a simple setup, you’re ready to listen to your favorite music right out of the box.

What's In The Box

- Omni S2 Rechargeable
- Power cable
- User Guide

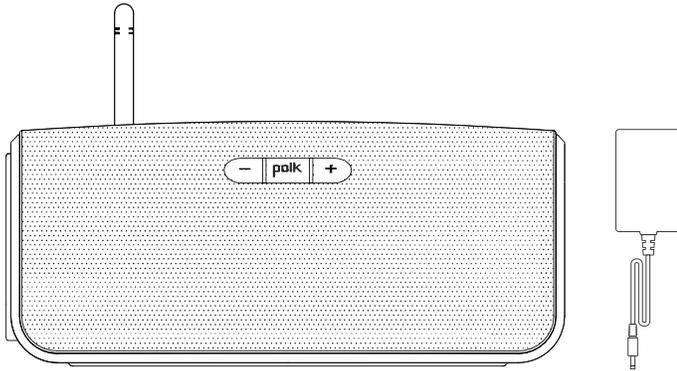

Getting Started

Your Home Network

In general, Wi-Fi is the wireless streaming of data over a network. Here, Wi-Fi audio is the streaming of music throughout a home network by connecting multiple speakers and/or devices together. The controller for the Polk Omni Collection is the Polk Omni App, which sends music information to each DTS Play-Fi enabled speaker or device.



System requirements

It all begins by building a wireless home network, preferably one with a high-speed Internet connection. Here's what you'll need to connect your S2 Rechargeable to your network:

- A Wireless Network connected to the internet with an 802.11g router or better*.
- An Android device with version 2.2 operating system or newer OR an iOS device with version 6.0 operating system or newer.
- The password for your wireless network (if required).

*Router type is usually listed on the router, itself. Please call the Polk Preferred Services @ 1-800-638-7276 for further questions related to router type.


For The Best DTS Play-Fi Experience

To ensure your system is operating under the best environment possible, here are a few additional tips:

- For the fastest streaming performance, especially when connecting to multiple speakers simultaneously, an 802.11n router or better is recommended.
- Ensure the DTS Play-Fi device is within wireless reach of your router, or that the signal is not hindered by concrete, brick, or other dense walls. The quality of your connection can be observed in the Polk Omni App by the Wireless Strength icon.

S2 Rechargeable Controls

+	Volume Up
-	Volume Down
polk	Play/Pause

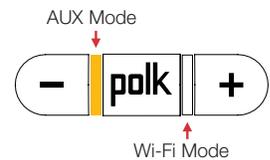

On/Off Plug in the power cord, the S2 Rechargeable powers on.

Play/Pause button The button with the Polk logo on it

Status indicator Two on the front, on either side of the Play/Pause button. To the left is AUX, to the right Wi-Fi.

Volume up (+) Volume down (-) Press these buttons to adjust the volume up and down.

AC power input (100 - 240V, 50/60 Hz) Use only the supplied power brick to connect to a power outlet. Insert the power cord connector firmly into the S2 Rechargeable until the connector sits flush.

Portability of S2 Rechargeable

What good is your whole-house music collection if you can't take your music to your outdoor living spaces? Polk designed the S2 Rechargeable so that you can take music to places without power outlets (ex. poolside, patios, or decks). In fact, it can go just about anywhere up to 100 yards from your home network. Please keep in mind that although the S2 Rechargeable is weather resistant and can withstand infrequent or accidental rain, **it is not water-proof**. Do not leave the S2 Rechargeable outside for extended periods of time.

Battery Life of S2 Rechargeable

On a full charge and playing at full-volume, the S2 Rechargeable has a 10-hour battery life.

Battery Charging

When the S2 Rechargeable is turned on, or the power cord removed, the LED to the left of the Polk logo on the Play/Pause button will blink as follows:

Battery charge	LED blinks white
80-100%	x4
60-80%	x3
40-60%	x2
20-40%	x1
<20%	rapid blinking alternating between LED1 and 2.

Note: Unplugged and without a charge, the S2 Rechargeable will not show up as an available speaker on the Polk Omni App.

Connecting Your S2 Rechargeable

Wi-Fi Setup

1. To ensure the easiest setup, place your S2 Rechargeable near your internet-connected wireless router. Note, when setup is complete, you can move your device anywhere you want to.
2. Connect the included power cable to the S2 Rechargeable and a power outlet. The device will power on automatically.
3. The white light on the back will blink quickly for about 20 seconds, after which it will begin to pulse slowly.
4. The slowly pulsing light means your device is ready to connect to your Wi-Fi network.

Note: if the Wi-Fi LED is not pulsing slowly, Press and hold the Wi-Fi setup button (for 8 seconds), until you hear the second tone.

5. Download the Polk Omni App from the Apple App Store or Google Play Store.
6. Launch the app and follow the instructions.



Omni App
for iPhone, iPad and
Android devices.



Utility App
for iPhone, iPad and
Android devices.

Note: to enable Wi-Fi Protected Setup (WPS) mode with a WPS compatible router, press and hold the Wi-Fi button on the S2 Rechargeable for 4 seconds or until the first beep. Now push the WPS button on your wireless router. The S2 Rechargeable will automatically connect to your network without the need to enter your password.

Wired Ethernet Connection

A hard-wired Ethernet connection can provide a faster transfer rate than a wireless connection. While Polk Omni Collection products do not have a dedicated Ethernet port, they do have a USB Port. Using an Ethernet adapter for a USB cable, you can connect your products directly to your router.

Apps

iOS device instructions

1. Launch the Polk Omni app.
2. The app will suggest that a new device is ready to be setup. Click on the device and hit next within the app to take you to setup instruction screens.
3. Exit the Polk Omni app and go to your Settings on your iOS device.
4. Select Wi-Fi. Ensure that Wi-Fi is enabled. Once enabled, choose from the list the device listed with "DTS Play-Fi" in the name.
5. Once selected, exit the settings menu and return to the Polk Omni App to select your wireless network. (if password protected, enter your password)
6. When your device is connected to the network, the Wi-Fi light will change from blinking to a solid white.
7. You're connected! From here, feel free to rename your device with one of the preset names, create your own custom name, or skip right to enjoying music.

Android device instructions

1. Launch the Polk Omni app.
2. The app will automatically find your device and prompt you to set it up. Tap the "Set up" button.
3. If your Wi-Fi network is protected, enter the password. The app will connect the device to the network.
4. When your device is connected to the network, the Wi-Fi light will change from blinking to a solid white.
5. You're connected! From here, feel free to rename your device with one of the preset names, create your own custom name, or skip right to enjoying music.

Polk Omni Utility App

For access to extended functionality, including Product Firmware Updates, Source Selection, and EQ Settings (Polk Omni A1 Amp and Omni P1 adapt only when paired with Polk Audio speakers), download the free Polk Omni App, available from the App Store or Google Play Store.

Note: This app is not required for daily music streaming use.



Downloading the DTS Play-Fi PC App

- Visit <https://Play-Fi.com/windows/polk>
- Click on "Download Free Version"
- Once downloaded to PC, DTS Play-Fi logo will show up in your Task Manager.
- Click on DTS Play-Fi driver
- Click on any zone to begin controlling.

Call the Polk Preferred Services @ 1-800-638-7276 to find out how to upgrade to the Premium Play-PC driver for multi-zone control capabilities.

Working with NAS Drives, PCs, and Mac Devices

The Polk Omni App is capable of recognizing any Media Server or NAS drive that is broadcasting over your home network and that's configured for open access using the DLNA protocol. Using the DTS Play-Fi Windows app, the Polk Omni Collection products will play any file capable of being played by the Windows operating system, including all music services. See "Downloading the DTS Play-Fi PC App" above to learn more.

Because OSX devices don't support DLNA, a third party software (ex. Twonky, Plex or Servio) must be downloaded for them to be visible to the network. Once downloaded, all locally stored content on OSX-based devices will show up within the Polk Omni App under "Media Server."

Playing Music

Now that you're connected, open the Polk Omni app to begin playing music. To begin playing music, start by selecting the preferred music source. The next step is to select the device(s) from which you want to hear the music. When done, click "Next." You can now select the music you want to play.

Music choices to select from include:



Your personal music library- hear all the music stored on your phone, tablet or computer through your Polk Omni products and all throughout your home.



Internet Radio- Enjoy radio stations from around the world, in virtually any genre, and all of it free. Internet Radio has 37,000 stations with popular brands like Disney, BBC, NPR, Fox News Radio, Wall Street Journal Radio and more.

Online music services- Stream the most popular online music services including Pandora and Songza. For the most updated list of music services, visit www.polkaudio.com. Services like KKBox, QQMusic and Deezer are available internationally in select countries.

Adding another speaker or component

Adding to your Polk Omni Collection is easy

The Omni Collection makes creating a whole house wireless music system as simple as pushing a button or two. Add more S2 speakers, a sound bar, an amp or adapter to an existing audio system. The Omni App and your home network do the rest.

- From the Omni App home page, choose "Settings."
- From the "Settings" screen, choose "Add DTS Play-Fi Device."
- Follow the app's instructions to add the device to your list.

Maximum number of rooms/zone supported:

Eight separate wireless source devices (smartphones, tablets, etc.), each with its own source, are supported simultaneously and any wireless source device can stream to 8 playback devices. Due to bandwidth limitations of most wireless networks, we do not recommend more than 16 wireless DTS Play-Fi products on the Wi-Fi network at a given time. With hard-wired Ethernet connections (customary for audio/video racks or in custom installation configurations), up to 256 devices can be theoretically supported. Call the Polk Preferred Services @ 1-800-638-7276 for more information.

Creating a stereo pair

Creating a stereo pair with two Polk Omni Wireless speakers will make your music sound even more dynamic. Setup is easy:

1. First, make sure the two speakers you want to stereo pair are in the same room.
2. From your list of devices, go to the upper right-hand corner and select the three dots.
3. From the drop-down menu, select "Stereo Setup."
4. Press "Select a Stereo Pair."
5. From your list of speakers, first choose the LEFT speaker.
6. Next choose the RIGHT speaker.
7. Name the Stereo Pair.
8. The name of the Stereo Pair will appear on the "Create a Stereo Pair" screen.
9. You're finished. Enjoy!

Primary vs. Secondary Speakers

Once inside the Polk Omni app, you will notice that when sending music to your devices, they are grouped into primary and secondary zones. The DTS Play-Fi software requires that a primary speaker be selected to create a new listening session or zone. This is designed to maximize synchronization down to one millisecond, thereby eliminating any sound echo that can be found from other ecosystems.

Our recommendation for your listening environment is to always select as your primary device the DTS Play-Fi enabled product with the strongest signal strength. Note, however, that secondary speakers are connected to your primary speaker. As such, if you disable your primary speaker, any secondary speakers will likewise be temporarily disabled until a primary speakers is once again selected.

S2 Rechargeable Specifications	
Width	9.06 in / 23.0 cm
Height	3.96 in / 10.0 cm
Depth	4.49 in / 11.4 cm
Wireless Connectivity	2.4GHz & 5GHz
Drivers	Two 2" (50 mm) full-range drivers, 2 passive radiators
Inputs	Analog
Included in Box	External Power Supply
Warranty	1 year

Dual-Band Capabilities

Polk Omni Collection products all have “dual-band” capabilities. The most standard wireless band – 2.4 GHz – can often times be congested and slow, especially in environments where you have many routers sending wireless signals (ex. mixed-use developments like apartment buildings). In these instances, the Omni Collection can also jump onto the 5 GHz band.

DTS Play-Fi Accepted File Formats:

- mp3 (MPEG Layer III)
- m4a and aac (Advanced Audio Coding)
- flac (Free Lossless Audio Codec)
- wav (Waveform Audio File)

File Quality:

- Lossless file reproduction up to 16-bit/48kHz (CD Quality) and proper file handling for full compatibility with all high-resolution music up to 24bit/192k.
- Plays all format bitrates [kbps]. DTS Play-Fi transmits high-resolution files, but it does down-sample them so that they can be distributed throughout a home.

Software Updates

In the spirit of improving the performance and functionality of your system, software updates will be required from time to time. To download those updates, we highly encourage you to register your Polk product during the setup process. On the home page of the app, scroll down to “Preferred Services” and follow the instructions.

Basic Troubleshooting

Under “Settings” on the Omni App home page, you will find a category called Troubleshooting. This link will take you to the DTS Play-Fi Knowledge Base <https://Play-Fi.com/faq?/support>. Note that quite often an issue can be traced back to router or network performance. As always, for help answering any of your questions, please call the Polk Preferred Services @ 1-800-638-7276.

Important Note: Router speeds and ranges that a manufacturer lists are determined under ideal operating conditions. A router's signal can be affected by walls and their construction materials.

Technical Assistance

Thank you for your Polk purchase. If you have a question or comment, please feel free to call us or email us. In North America, call Polk Customer Service 800-377-POLK(7655) (M-F, 9:00 AM-5:30 PM EST) or via email polkcs@polkaudio.com. Outside the US, call +1-410-358-3600.

Contact Us Directly

Polk
1 Viper Way, Vista, CA 92081
800-638-7276 | www.polkaudio.com



1 Viper Way
Vista, CA 92081
800-638-7276
www.polkaudio.com

email: polkcs@polkaudio.com
twitter: @polkaudio

Google Play is a trademark of Google Inc.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

All other trademarks are the property of their respective owners.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, DTS Play-Fi, the Symbol, and DTS Play-Fi together in combination with the Symbol are trademarks of DTS, Inc. DTS and DTS Play-Fi are registered trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.