

USER RESET– Microprocessor Initialization for “In Command X” & “S” Series

NOTE: All user settings will be lost after the set is initialized.

Reset Type	Model	Button A	Button B	Button C	Procedure
<p>USER RESET Initialization Mode For X & S Series Models</p> <p>Click Here For CI, Core & E series USER (MICRO) RESET</p>	AVR-X7200W AVR-X6300H AVR-X6200W AVR-X5200W AVR-X4300H AVR-X4200W AVR-X4100W AVR-X4000W	BACK	INFO	POWER	With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until "INITIALIZED" is displayed.
	AVR-X3300W AVR-X3200W AVR-X3100W AVR-X3000W AVR-X2300W AVR-X2200W AVR-X2100W AVR-X2000W AVR-X1300W AVR-X1200W AVR-X1100W AVR-X1000W AVR-S920W AVR-S910W AVR-S900W AVR-S720W AVR-S710W AVR-S700W	TUNER PRESET CH-	TUNER PRESET CH+	POWER	With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.
	AVR-S510BT AVR-S500BT	SOUND MODE ▶	TUNER PRESET CH +	POWER	

USER RESET
CI, CORE, E Series

NETWORK RESET

FACTORY RESET
CI, CORE, E Series

FACTORY RESET
X and **S** Series

Model Info

USER RESET– Microprocessor Initialization for “CI”, “CORE & “E” Series

NOTE: All user settings will be lost after the set is initialized.

Reset Type	Model	Button A	Button B	Button C	Procedure
<p>USER RESET Initialization Mode For CI, CORE & E Series Models</p> <p>Click Here For X, & S series USER (MICRO) RESET</p>	AVR-4810CI	STANDARD	DSP SIMULATION	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>
	AVR-4520CI	BACK	INFO	POWER	
	AVR-4311CI	STANDARD	DSP SIMULATION	POWER	
	AVR-3313CI	BACK	INFO	POWER	
	AVR-3312CI	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-3311CI	STANDARD	DSP SIMULATION	POWER	
	AVR-2313CI	TUNER PRESET CH-	TUNER PRESET CH+	POWER	
	AVR-2312CI	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-2311CI	SURROUND MODE ►	SURROUND MODE ◀	POWER	
	AVR-2113CI	TUNER PRESET CH-	TUNER PRESET CH+	POWER	
	AVR-2112CI	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-1913	SOURCE SELECT ►	SOURCE SELECT ◀	POWER	
	AVR-1912	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-1911	SURROUND MODE ►	SURROUND MODE ◀	POWER	
	AVR-1713	SOURCE SELECT ◀	SOURCE SELECT ►	POWER	
	AVR-1712	DOCK CONTROL ◀◀	DOCK CONTROL ▶▶	POWER	
	AVR-1613	SOURCE SELECT ◀	SOURCE SELECT ►	POWER	
	AVR-1612	iPOD SYSTEM ◀◀	iPOD SYSTEM ▶▶	POWER	
	AVR-1611	SURROUND MODE ►	SURROUND MODE ◀	POWER	
	AVR-1513	SOURCE SELECT ►	SOURCE SELECT ◀	POWER	
	AVR-1312	DOCK CONTROL ◀◀	DOCK CONTROL ▶▶	POWER	
	AVR-991 AVR-891 AVR-791 AVR-591	SURROUND MODE ►	SURROUND MODE ◀	POWER	
AVR-E400	SOURCE SELECT ►	SOURCE SELECT ◀	POWER		
AVR-391	SURROUND MODE ►	SURROUND MODE ◀	POWER		
AVR-E300 AVR-E200	SOURCE SELECT ►	SOURCE SELECT ◀	POWER		

NETWORK RESET

USER RESET
X and **S** Series

FACTORY RESET
CI, CORE, E Series

FACTORY RESET
X and **S** Series

Model Info

FACTORY RESET– Initialization for “In Command X” & “S” Series

NOTE: All user settings will be lost and the factory settings (Including installer setup) will be restored after the set is initialized.

Reset Type	Model	Button A	Button B	Button C	Procedure
<p style="text-align: center;">Factory Reset Initialization Mode For X & S Series Models</p> <div style="border: 1px solid blue; border-radius: 10px; padding: 5px; width: fit-content; margin: 10px auto;"> <p style="text-align: center; color: white;">Click Here For CI, Core & E series FACTORY RESET</p> </div>	AVR-X7200W AVR-X6300H AVR-X6200W AVR-X5200W AVR-X4300H AVR-X4200W AVR-X4100W AVR-X4000W	CURSOR ▲	CURSOR ▼	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>
	AVR-X3300W AVR-X3200W AVR-X3100W AVR-X3000W AVR-X2300W AVR-X2200W AVR-X2100W AVR-X2000W AVR-X1300W AVR-X1200W AVR-X1100W AVR-X1000W	ZONE2 SOURCE	DIMMER	POWER	
	AVR-S920W AVR-S910W AVR-S900W AVR-S720W AVR-S710W AVR-S700W	TUNER PRESET CH+	TUNE -	POWER	
	AVR-S510BT AVR-S500BT	Factory Reset is not available on these models			

USER RESET
CI, CORE, E Series

USER RESET
X and **S** Series

FACTORY RESET
CI, CORE, E Series

NETWORK RESET

Model Info

FACTORY RESET– Initialization for “CI”, “CORE” & “E” Series

NOTE: All user settings will be lost and the factory settings (Including installer setup) will be restored after the set is initialized.

Reset Type	Model	Button A	Button B	Button C	Procedure	
<p>Factory Reset Initialization Mode For CI, CORE & E Series Models</p> <p>Click Here For X, & S series FACTORY RESET</p>	AVR-4810CI AVR-4520CI AVR-4311CI AVR-3313CI	CURSOR ▲	CURSOR ▼	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>	
	AVR-3312CI	PRESET CHANNEL 1	PRESET CHANNEL 3	POWER		
	AVR-3311CI	CURSOR ▲	CURSOR ▼	POWER		
	AVR-2313CI	TUNER PRESET CH-	TUNER PRESET CH+	POWER		
	AVR-2312CI	PRESET CHANNEL 1	PRESET CHANNEL 2	POWER		
	AVR-2311CI	NA				
	AVR-2113CI	ZONE2/REC SOURCE	DIMMER	POWER		
	AVR-2112CI	PRESET CHANNEL 1	PRESET CHANNEL 2	POWER		
	AVR-1913	ZONE2 SOURCE	DIMMER	POWER		
	AVR-1912	PRESET CHANNEL 1	PRESET CHANNEL 2	POWER		
	AVR-1911	NA				
	AVR-1713	DIMMER	SOURCE SELECT ►	POWER		
	AVR-1712	DOCK CONTROL ■	DOCK CONTROL ◀◀	POWER		
	AVR-1613	DIMMER	SOURCE SELECT ►	POWER		
	AVR-1612	TUNER PRESET CH +	SOURCE ▲	POWER		
	AVR-1611	NA				
	AVR-1513	SOURCE SELECT ►	SOURCE SELECT ◀	POWER		
	AVR-1312	NA				
	AVR-991	CURSOR ▲	CURSOR ▼	POWER		
	AVR-891 AVR-791 AVR-591	NA				
	AVR-E400	ZONE2 SOURCE	DIMMER	POWER		
	AVR-391	NA				
	AVR-E300	TUNER PRESET CH +	DIMMER	POWER		
AVR-E200	NA					

With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.

Click Here For **X**, & **S**
series **FACTORY RESET**

USER RESET
CI, CORE, E Series

USER RESET
X and S Series

NETWORK RESET

FACTORY RESET
X and S Series

Model Info

NETWORK RESET– Initialization Mode For “X” Series Models With Built-in HEOS

NOTE: The items listed below are initialized.

Reset Type	Model	Button A	Button B	Input Source	Procedure
Network Reset For X Series Models with Built-in HEOS.	AVR-X6300H AVR-X4300H	Cursor ▲	Cursor ▼	Online Music	With the power “On” and the input source set to “Online Music”, press and hold the "CURSOR ►" and "DIMMER" buttons for more than 3 seconds. During initialization, the display shows “Network Reset” and when done, “Completed” is displayed for 5 seconds before returning to the normal display.

Network Initialization Mode

The following items are initialized:

- (1) Network setup
- (2) Friendly Name
- (3) Auto Update setting
- (4) Allow Update setting
- (5) Time Zone setting
- (6) Queue list
- (7) Internet Radio recently played station
- (8) Quick Select playback station
- (9) AirPlay Password
- (10) Bluetooth Pairing History
- (11) Crestron Connected Setup

Operations

With the power is on and the input source set to “Online Music”, press and hold the "CURSOR ►" and "DIMMER" buttons for more than 3 seconds. “Network Reset” appears on the screen followed by “Completed”, which is displayed for 5 seconds before returning to the normal display.

USER RESET
CI, CORE, E Series

USER RESET
X and S Series

FACTORY RESET
CI, CORE, E Series

FACTORY RESET
X and S Series

Model Info