

- Model Information Index
- Front Panel
- Rear Panel
- Remote Control
- Warranty
- Reset Procedure
- Accessories
- Protection History Display Mode
- Upgrades/Updates
- Product Specifications
- I/R Codes

Model Information


INTEGRATED NETWORK AV RECEIVER



NOTE:

This edition is missing the link to the IR codes..... 12/08/2016

Front Panel (1 of 2)

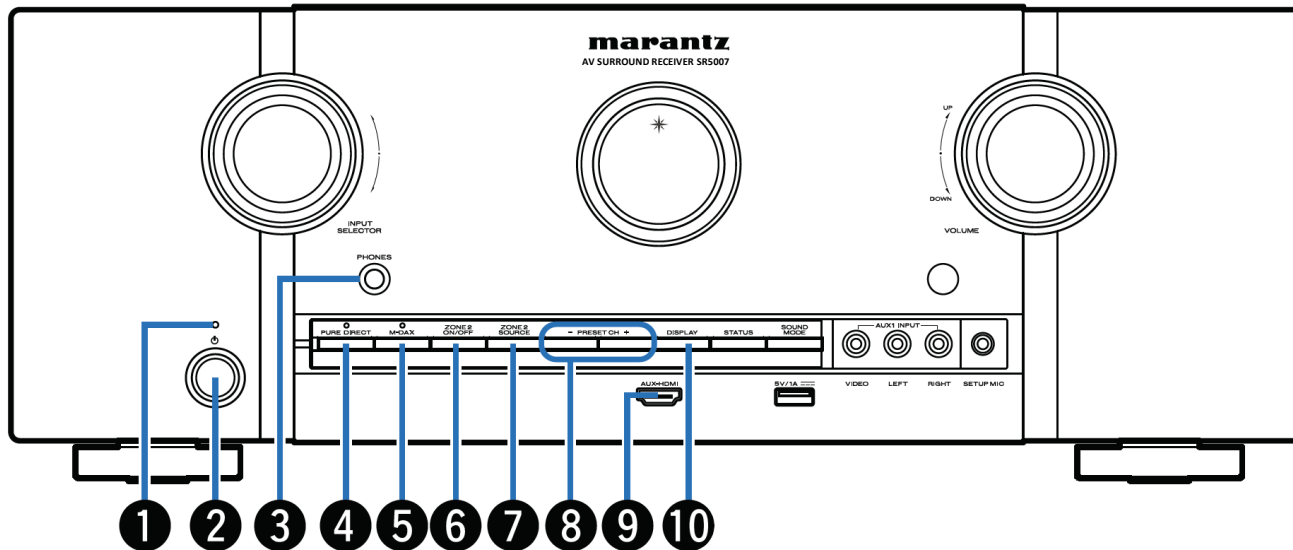

1 Power indicator

This is lit as follows according to the power status:

- Off: Power on
- Red: Normal standby
- Orange:
 - When "HDMI Pass Through" is set to "On"
 - When "HDMI Control" is set to "On"
 - When "IP Control" is set to "Always On".

2 Power operation button

Used to turn the power of the MAIN ZONE (room where this unit is located) on/off (standby).

3 Headphones jack (PHONES)

This is used to connect headphones. When the headphones are plugged into this jack, audio will no longer be output from the connected speakers or from the PRE OUT connectors.

NOTE: To prevent hearing loss, do not raise the volume level excessively when using headphones.

4 PURE DIRECT button

This switches the sound mode between DIRECT, PURE DIRECT and AUTO.

5 M-DAX button

This enables the M-DAX mode.

6 ZONE2 ON/OFF button

This turns the power of ZONE2 on/off.

7 ZONE2 SOURCE button

This selects the input source for ZONE2.

8 Tuner preset channel buttons (PRESET CH +, -)

These select preset FM/AM radio stations.


9 AUX-HDMI connector

Used to connect devices such as video camcorders and game consoles.


10 DISPLAY button

This displays various pieces of information

Front Panel (2 of 2)

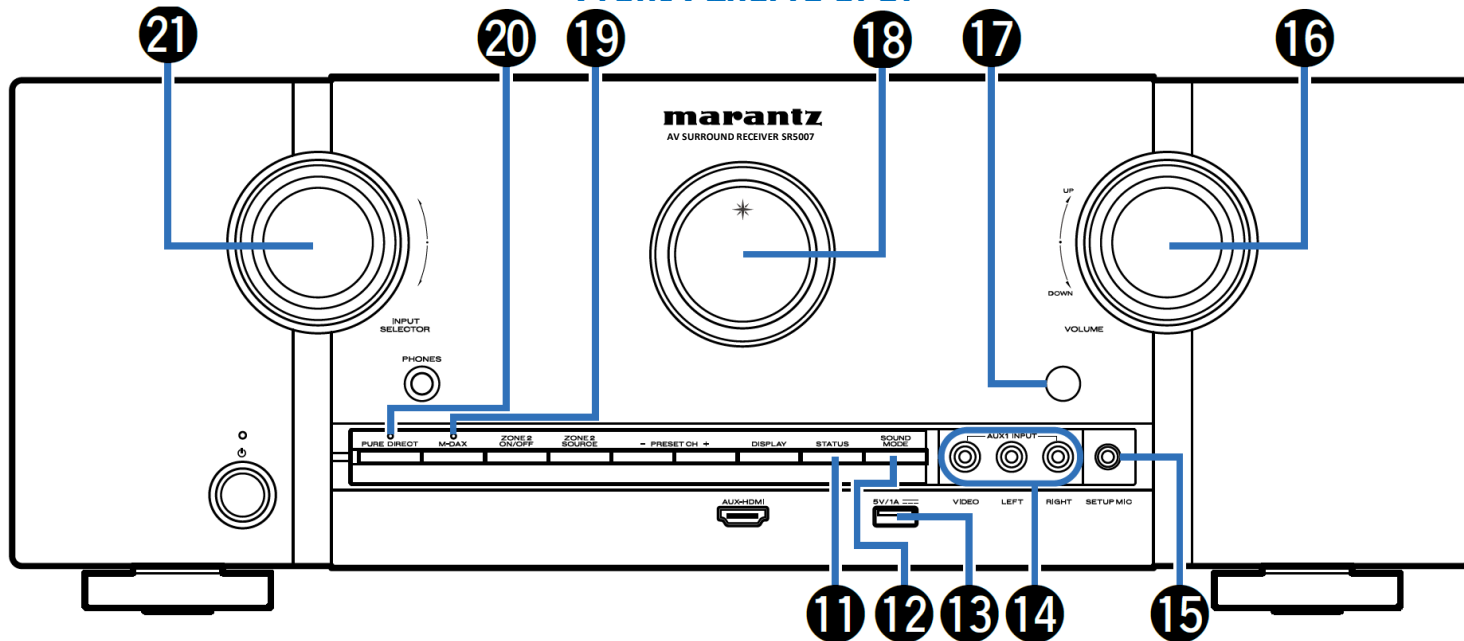

- 11 STATUS button**
Each press of this switches the status information that is shown on the Display.
- 12 SOUND MODE button**
This switches the sound mode.
- 13 USB port**
Used to connect USB storages (such as USB memory devices) and the USB cable supplied with iPod
- 14 AUX1 INPUT connectors**
Used to connect devices such as a video camcorders or game console.
Remove the cap covering the connectors when you want to use them.

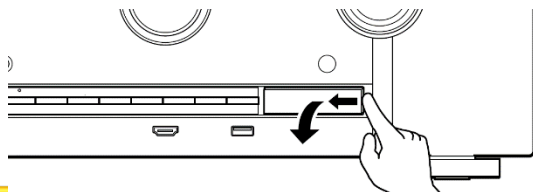


- 15 SETUP MIC jack**
Used to connect the supplied Setup and measurement microphone.
- 16 VOLUME knob**
This adjusts the volume level.
- 17 Remote control sensor**
This receives signals from the remote control unit.
- 18 Display**
This displays various pieces of information.
- 19 M-DAX indicator**
This lights when the M-DAX mode is selected.
- 20 PURE DIRECT indicator**
This lights when the PURE DIRECT mode is selected as the sound Mode.
- 21 INPUT SELECTOR knob**
This selects the input source

Main Display (1 of 2)

Main display

The input source name, sound mode, setting values and other information are displayed here.

❑ Standard display

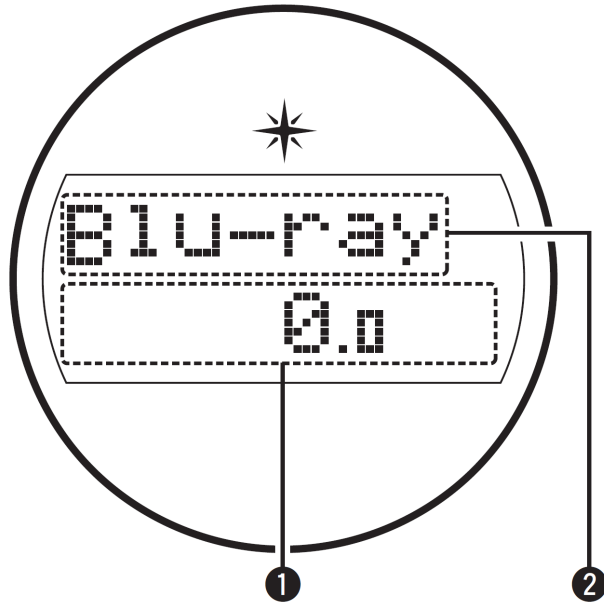


1 Master volume indicator

2 Input source indicator

The currently selected input source name is displayed. If the input source name has been changed using “Source Rename” in the menu, the input source name after the change is displayed.

❑ Tuner display

These light according to the reception conditions when the input source is set to “FM”.

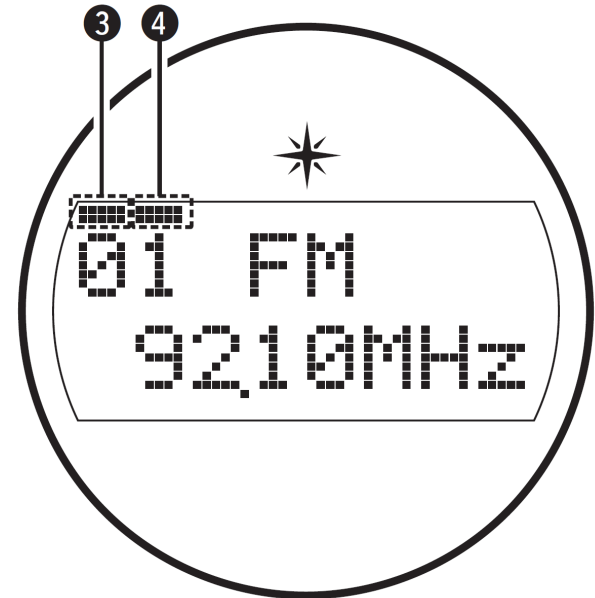


3 Lights up when the broadcast is properly tuned in.

4 In the FM mode, this lights up when receiving stereo broadcasts.


Main Display (2 of 2)

Sleep timer indicator

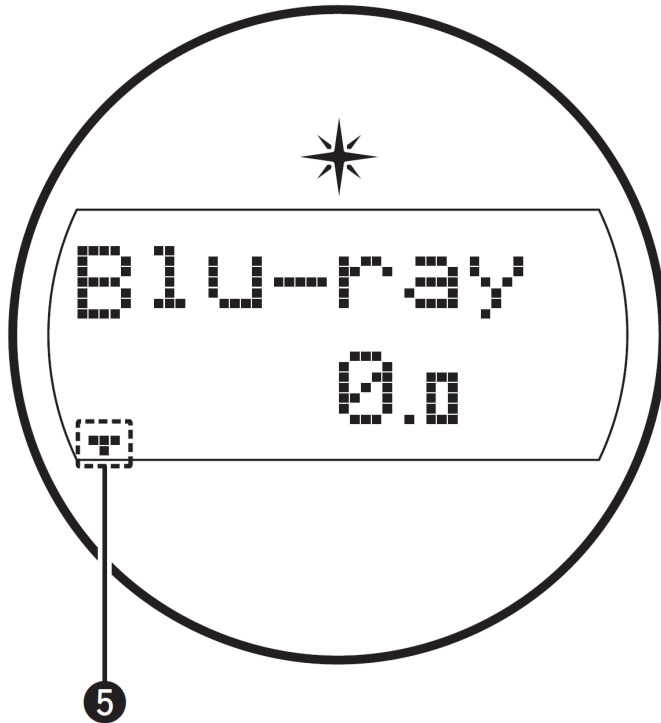


5 This lights when the sleep mode is selected.

ZONE2 power on display

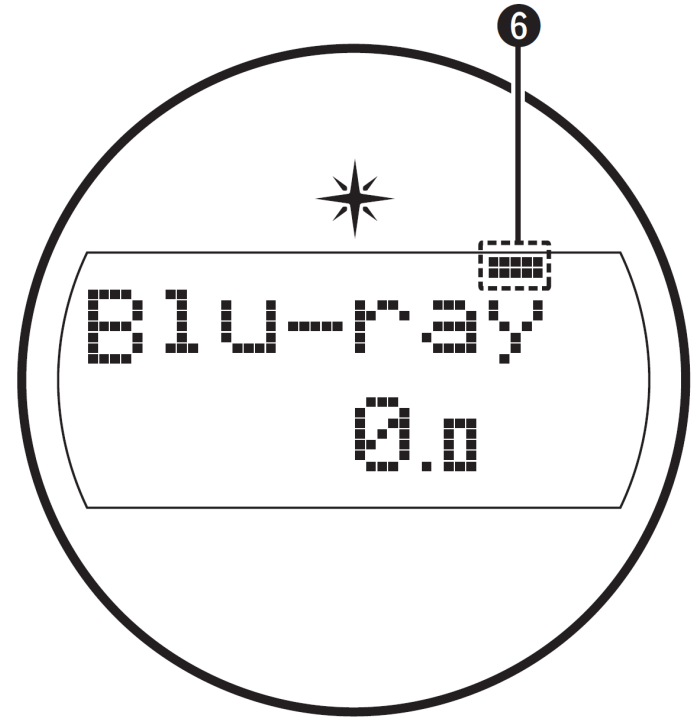

6 This lights up when ZONE2 (separate room) power is turned on.


Rear Panel

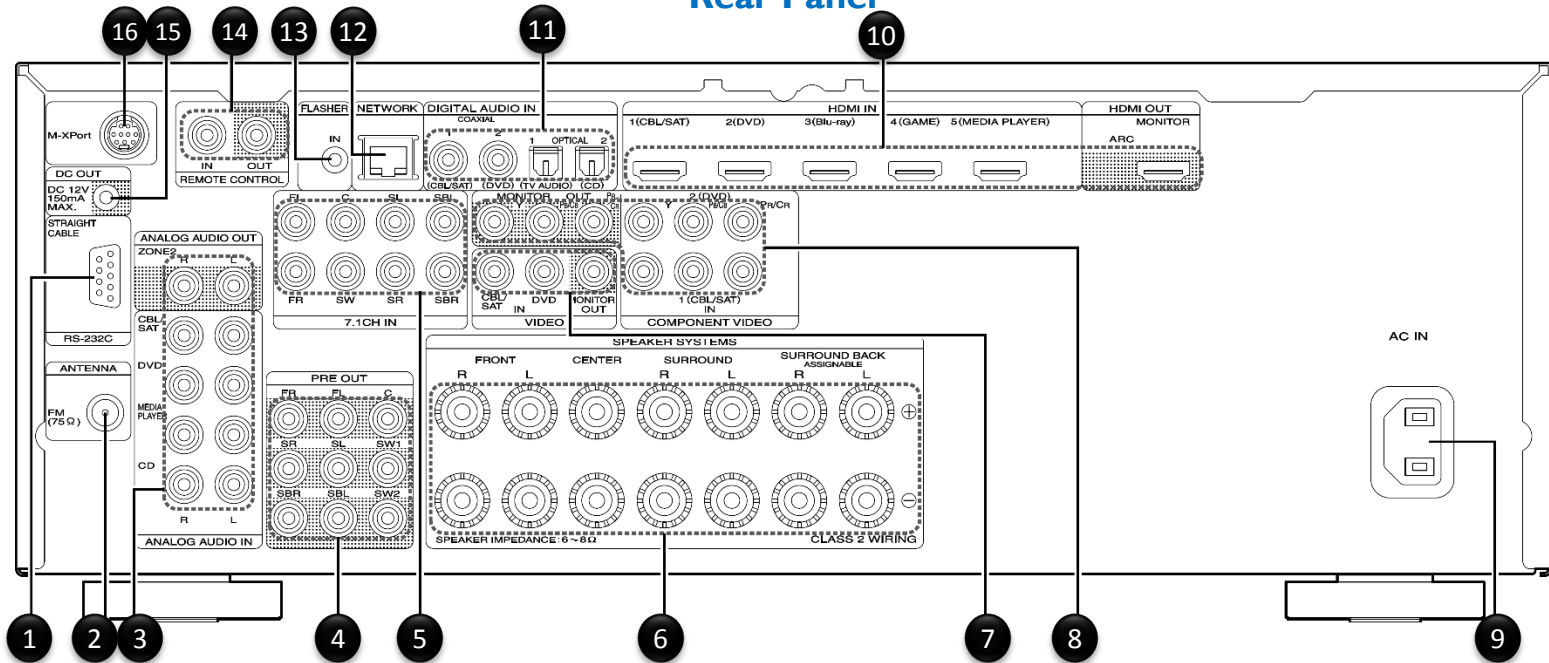

- | | |
|--|--|
| <ul style="list-style-type: none"> ① RC-232C connector ② FM antenna terminal (ANTENNA) ③ Analog audio connectors (ANALOG AUDIO IN/ANALOG AUDIO OUT) ④ PRE OUT connectors ⑤ 7.1ch input connectors (7.1CH IN) ⑥ Speaker terminals (SPEAKER SYSTEMS) ⑦ Video connectors (VIDEO) ⑧ Component video connectors (COMPONENT VIDEO) ⑨ AC inlet (AC IN) | <ul style="list-style-type: none"> ⑩ HDMI connectors ⑪ Digital audio connectors (DIGITAL AUDIO IN) ⑫ Network connector (NETWORK) ⑬ FLASHER IN jack
Used when using a control BOX or other such control devices to control this unit. ⑭ REMOTE CONTROL connectors ⑮ DC OUT jacks ⑯ M-XPort connector |
|--|--|

NOTE:
Do not touch the inner pins of the connectors on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

Remote Control

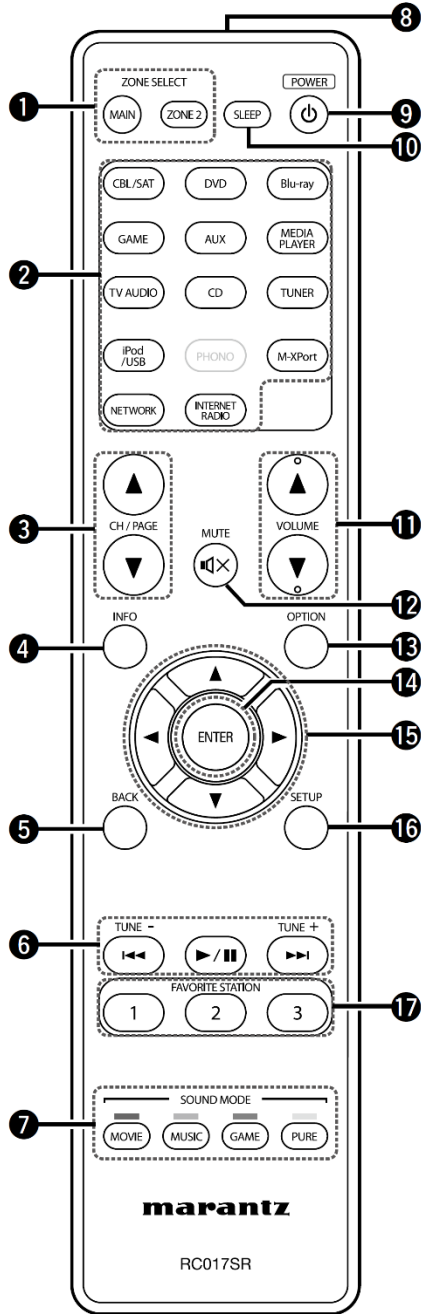

- 1 ZONE SELECT buttons (MAIN, ZONE2)
- 2 Input source select buttons
- 3 Channel/page search buttons (CH/PAGE df)
- 4 Information button (INFO)
- 5 BACK button
- 6 System buttons
 - Skip buttons (▲▼)
 - Play/pause button (▶/||)
- Tuning up / Tuning down buttons (TUNE +, -)
- 7 SOUND MODE buttons
 - MOVIE button
 - MUSIC button
 - GAME button
 - PURE button
- 8 Remote control signal transmitter
- 9 POWER button
- 10 SLEEP button
- 11 VOLUME buttons (▲▼)
- 12 MUTE button
- 13 OPTION button
- 14 ENTER button
- 15 Cursor buttons (▲▼◀▶)
- 16 SETUP button
- 17 FAVORITE STATION buttons (1 – 3)

MARANTZ USA LIMITED WARRANTY (1 of 2)

This warranty will be honored only in the **U.S.A.**

Length of Non-Transferable Warranty

This warranty on your Marantz product which is distributed and warranted by Marantz America Inc. remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS (USA), LLC DEALER.

3 year warranty for both Parts & Labor, from the original purchase date
1 year for refurbished (B-Stock) units

MARANTZ AMERICA, Inc.
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
(201) 762-6666
www.usa.Marantz.com

MARANTZ FACTORY SERVICE by PANURGY OEM
701 Ford Road (South Dock)
Rockaway, NJ 07866-2053
(973) 625-4056
(973) 625-9489 Fax
<http://www.panurgoem.com/Denon/Denonrepair.html>

See the next page for more information about the Marantz limited warranty

Warranty (2 of 2)

What is covered and what is not covered

Except as specified below, this warranty covers parts and labor to correct all defects in materials and workmanship. The following are not covered by the warranty.

1. Damage, deterioration, malfunction or failure to meet performance specifications resulting from:
 - Accident, acts of nature, misuse, abuse, neglect or unauthorized product modification.
 - Improper installation, removal or maintenance, or failure to follow instructions supplied with the product.
 - Repair or attempted repair by anyone not authorized by Marantz to repair the product.
 - Any shipment of the product (claims must be presented to the carrier).
 - Any cause other than a product defect.
2. Cleaning, initial set-up, check-ups with no defects found, or charges incurred for installation, removal or reinstallation of the product.
3. Any product on which the serial number has been defaced, modified or removed.
4. Batteries.
5. Accessories, including but not limited to, batteries, cables, mounting hardware and brackets, cleaning accessories, antenna and detachable power cords.
6. Warranty is void if purchase was made from anyone other than an authorized Marantz dealer.

Who may enforce the warranty?

This warranty may be enforced only by the original purchaser.

What we will pay for

We will pay for all labor and material expenses for items covered by the warranty. Payment of shipping charges is discussed in the next section of this warranty.

How you can get service

- If your unit needs service, contact Marantz customer service by calling 201-762-6666. We will advise you of the name and location of one or more authorized Marantz service stations from which service can be obtained. Please do not return your unit to the factory without prior authorization.
- You must pay any shipping charges if it is necessary to ship the product for service. However, if the necessary repairs are covered under warranty, we will pay the return shipping charges to any destination within the United States, its possessions or territories.
- Whenever warranty service is required, you must present the original dated sales receipt or other proof of date of purchase.

Limitations of implied warranties

All implied warranties, including warranties of merchantability and fitness for a particular purchase, are limited in duration to the length of this warranty.

Exclusion of damages

Marantz liability for any defective product is limited to repair or replacement of the product at Marantz's option. Marantz shall not be liable for damage to other products caused by any defects in Marantz products, damages based upon inconvenience or loss of use of the product, or any other damages, whether incidental, consequential, or otherwise.

How the law relates to the warranty


Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Important: Back up the settings before resetting the microprocessor. Most settings are reset to the factory default values after performing this procedure. This means that all the settings data will be completely lost if it's not previously saved.

Reset procedure:

With the power off, press and hold the "PRESET CH-" button, "PRESET CH+" button, and "POWER" button simultaneously on the AVR for a few seconds until "INITIALIZED" appears on the AVR's display

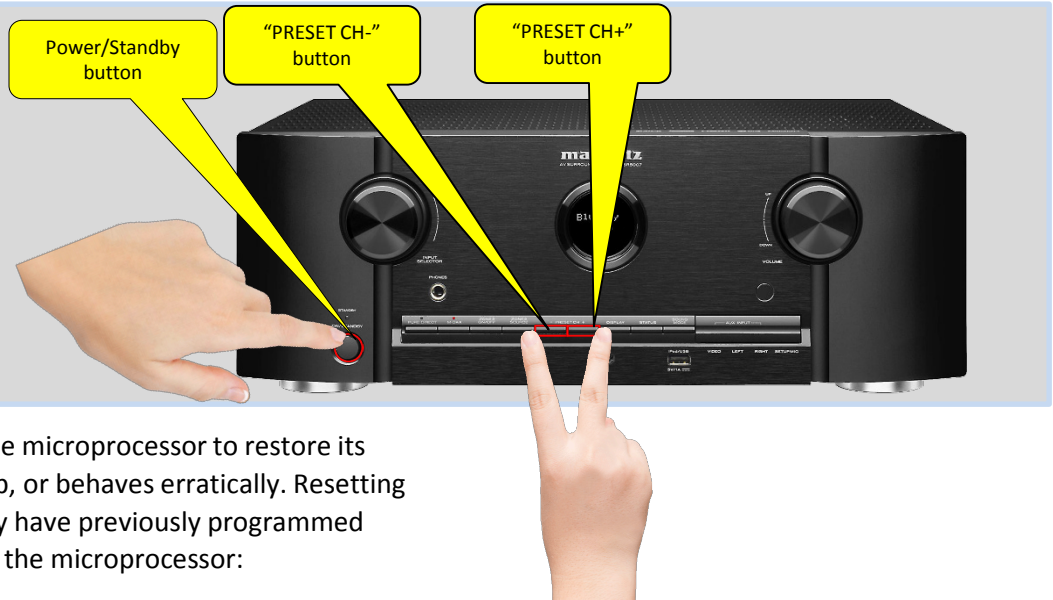

Resetting the micro is a procedure used to "reboot" the microprocessor to restore its normal operation when it temporarily freezes, locks up, or behaves erratically. Resetting the microprocessor, erases any saved settings you may have previously programmed into the unit. Issues that can affect the performance of the microprocessor:

- A jolt of static electricity
- Current surge through an input





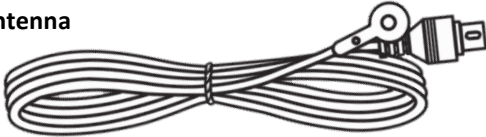
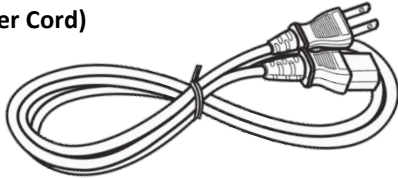
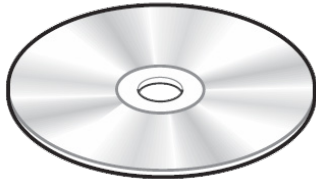
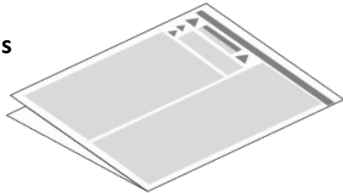
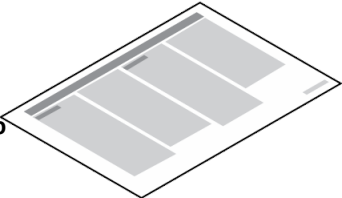
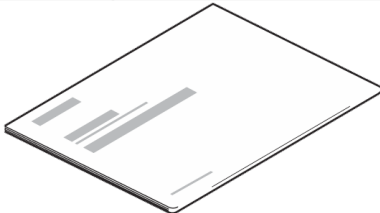
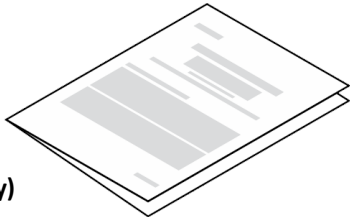
Before resetting the microprocessor;

- Check all connections carefully
- Check for setup errors
- Back up your settings. You may also want to write down your preferred settings for easier task of setting up the AVR after reset.

Note: The Web (Browser) Control feature can be used to back up your settings by saving a configuration file on your hard drive. For this feature, we recommend using one of the following web browsers: Internet Explorer 10 and above, Mozilla Firefox 24 and above, Google Chrome 29 and above, and Safari 5.x and above.

Note: If you had an installer setup your system, please first contact your installer to see if they can reset and then setup your system again as there may be specific EQ calibrations (Audyssey) that the installer will need to perform.

Accessories

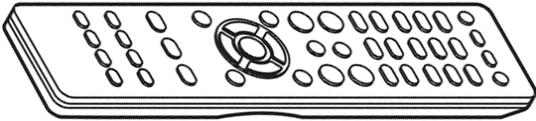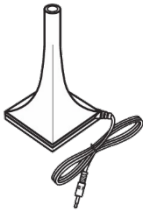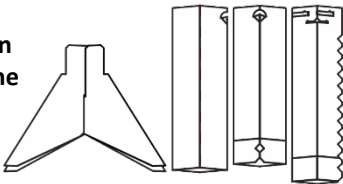Remote Control (RC017SR) 		Sound Calibration Microphone (ACM1HB) 		Sound Calibration Microphone Stand 	
30701009900AM	\$	32401000800AD	\$31.99	963549101000D	\$16.82
AM Loop Antenna 		FM Indoor Antenna 		Power Cord) 	
	\$	963116100080S	\$3.27	90M-ZC000470R	\$30.64
		CD ROM Owner's Manual 		Safety Instructions 	
Notes on Radio 		Quick Start Guide 		Warranty (For North America Only) 	

RESET

HOME

FAQ's

This Page Intentionally Left Blank

This Page Intentionally Left Blank

Dolby Atmos, DTS:X and Auro-3D Upgradeable

Dolby Atmos and DTS:X surround sound technologies dispense with channel-based coding in favor of object-based coding, giving the sound designer the ability to precisely place sounds anywhere in the 3-dimensional space. The SR5007, features the ability to connect a 5.1 surround sound speaker system and 4 additional overhead speakers (or 4 additional Dolby Atmos elevation speakers) for the ultimate home cinema experience. Thanks to the 11ch processing capability, you can just add an external 2-channel amplifier and even enjoy a thrilling 7.1.4 channel Dolby Atmos or DTS:X experience. Dolby Surround Upmixer and DTS Neural:X Upmixer are also in place to simulate 3D sound from standard formats.

Auro-3D Upgrade

By fully immersing the listener in a cocoon of life-like sound, Auro-3D puts you right in the middle of the action. Auro-3D provides an immersive surround sound experience thanks to dedicated height and overhead channels, in addition to the regular channels. The height information, captured in recording or created during the mixing process, is mixed into a standard 5.1 PCM stream that comes with a regular Blu-ray. Moreover, the Auro-3D engine recognizes mono, stereo, 5.1 surround or an Auro-encoded signal and transforms them into 3D audio. Once upgraded with the Auro-Codec decoder, the SR5007 is capable of decoding the original Auro-3D mix and playing back an Auro-3D 10.1 channel configuration (with external amplifier). **Auro-3D upgrade availability and pricing to be announced.**

Visit <http://upgrade.Marantz.com> for upgrade information.

Upgrades/Updates (2 of 2)

Firmware:

This unit has the ability to update its firmware over the internet if so is selected by the user. When connected to a network via Wi-Fi or Ethernet, the AVR searches automatically for new updates and if any is found, a message appears on the screen for approx. 40 seconds with the options of updating the firmware: “NOW”, “LATER”, or “IGNORE”. Note: This feature of displaying the update message, can be disabled from the “Setup” menu (Setup/General/Firmware/Notifications/Update or Upgrade/Off).

If the update process is interrupted, “*Update retry*” appears on the display and the unit tries repeatedly to continue the update until it either reconnects and picks up where it left off and continue the update process or times itself out after trying several times. When the latter occurs, one of the following messages will appear on the screen.

Connection fail	Download fail	Updating fail	Server is busy	Login failed
-----------------	---------------	---------------	----------------	--------------

To Check for Firmware Update from the **Marantz** server when the unit is connected to the internet via the Ethernet port (When Firmware Notification is turned off).

Press “SETUP” and select “GENERAL” and then select “FIRMWARE” followed by “UPDATE” and finally, select “CHECK FOR UPDATE”.

Note: This will also check the time it will approximately take to complete the update.

To check to see if an update or upgrade is available for your **SR5007** and also to download the latest version of firmware, click on the following link:

<http://www.us.marantz.com/us/support/pages/productupdates.aspx>

Note: A list of “Recent Updates/Upgrades is also available at this link”

Specifications – Audio Section

Audio section

Power amplifier	Rated output	Front	100 W + 110 W (8 Ω /ohms, 20 Hz – 20 kHz with 0.08 % T.H.D.)
		Center	100 W + 110 W (8 Ω /ohms, 20 Hz – 20 kHz with 0.08 % T.H.D.)
		Surround	100 W + 110 W (8 Ω /ohms, 20 Hz – 20 kHz with 0.08 % T.H.D.)
		Surround back	100 W + 100 W (8 Ω /ohms, 20 Hz – 20 kHz with 0.08 % T.H.D.)
	Maximum effective output power	Front	150 W + 150 W (6 Ω /ohms, 1 kHz with 10 % T.H.D.)
		Center	150 W + 150 W (6 Ω /ohms, 1 kHz with 10 % T.H.D.)
		Surround	150 W + 150 W (6 Ω /ohms, 1 kHz with 10 % T.H.D.)
		Surround back	150 W + 150 W (6 Ω /ohms, 1 kHz with 10 % T.H.D.)
Output connector		6 – 8 Ω /ohms	
Analog	Input sensitivity/Input impedance		200 mV/47 k Ω /kohms
	Frequency response		10 Hz – 100 kHz — +1, –3 dB (Direct mode)
	S/N		100 dB (IHF–A weighted, Direct mode)

Specifications - Video section, Tuner Section, General Section

Video section					
Standard video connectors	Input/output level and impedance		1 Vp-p, 75 Ω/ohms		
	Frequency response		5 Hz -10MHz, 0, - 3dB		
Color component video connector	Input/output level and impedance		Y signal	1 Vp-p, 75 Ω/ohms	
			PB/CB signal		0.7 Vp-p, 75 Ω/ohms
			PR/CR signal		0.7 Vp-p, 75 Ω/ohms
	Frequency response		5 Hz - 60MHz – 0, -3dB		


Tuner section			
		FM	
		Note: μV at 75 Ω/ohms, 0 dBf = 1×10^{-15} W	
Reception frequency range		87.50 MHz - 107.90 MHz	
Effective sensitivity		1.2 μV (12.8 dBf)	
50 dB sensitivity		Mono – 2.8 μV (20.2 dBf)	
S/N ratio		Mono	70 dB
		Stereo	67 dB
Distortion		Mono	0.7 % (1KHz)
		Stereo	1.0 % (1KHz)

General section	
Power supply	AC 120V, 60Hz
Power consumption	650W
Power consumption in standby mode	0.2W
Power consumption in CEC standby mode	0.5W
Power consumption in network standby mode:	2.7W

For purpose of improvement, specifications and design are subject to change without notice.


Specifications – Dimensions, Weight

Dimensions section (Unit : inch/mm)

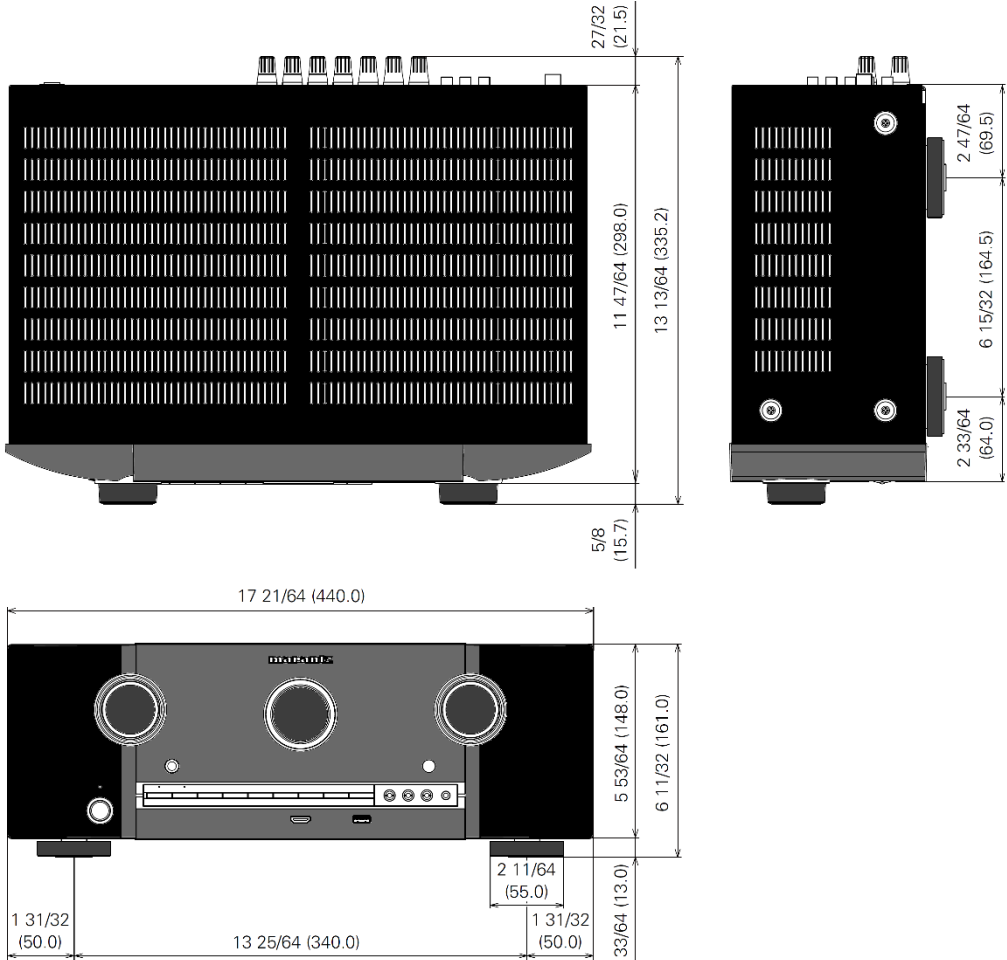

Weight: 22 lbs 4 oz (10.1 kg)

Protection History Mode records and displays an event in which the THERMAL, CURRENT, ASO or DC protection was activated.

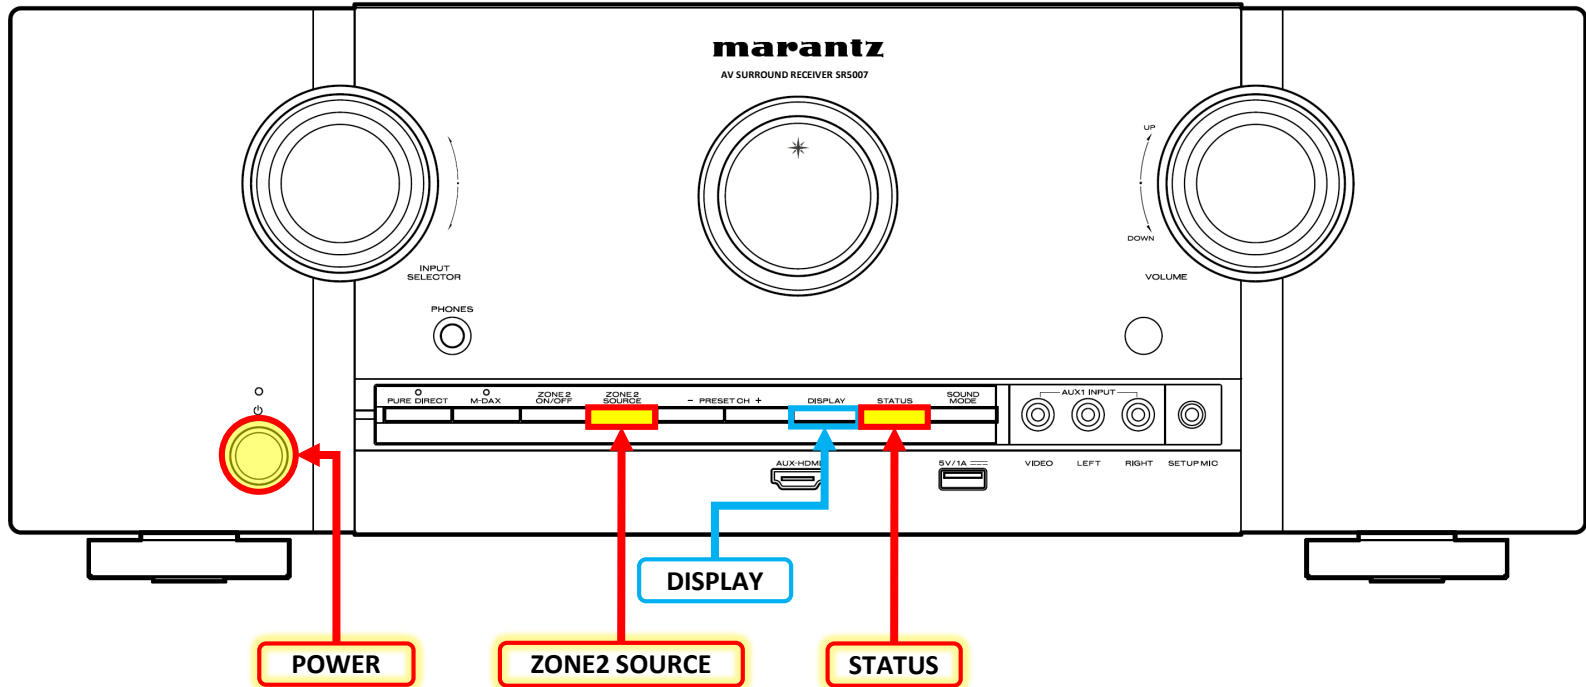

Procedure to enter the “Protection History Display Mode”.

1. Press and hold the “**ZONE 2 SOURCE**” and the “**STATUS**” buttons at the same time and press the “**POWER**” button to turn on the power.
2. The unit enters the “**Diagnostic Mode/Service Path Check Mode**” (Protection History Display, or RS232C Reset) and “**SERVICE CHECK**” is first displayed.
3. Press the “**PRESET+/-**” buttons to switch modes and press the “**STATUS**” button when “**Protection History Display Mode**” is displayed.
4. Press the “**STATUS**” button to display Protection History.

<p>1. If no protections have occurred, "No Protect" is displayed</p>	<table border="1"> <tr> <td>FLD</td> <td>P</td><td>R</td><td>O</td><td>T</td><td>E</td><td>C</td><td>T</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td></td> <td>H</td><td>I</td><td>S</td><td>T</td><td>O</td><td>R</td><td>Y</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td></td> <td>N</td><td>O</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>	FLD	P	R	O	T	E	C	T															H	I	S	T	O	R	Y															N	O																		
FLD	P	R	O	T	E	C	T																																																									
	H	I	S	T	O	R	Y																																																									
	N	O																																																														
<p>2. If last protection was ASO, "ASO" is displayed.</p> <p>Cause: A short circuit occurred between the speaker terminals, or speakers with an impedance outside the rating were connected. If the power is turned on during this abnormality, protection is activated after around 5 seconds and the power is turned off.</p>	<table border="1"> <tr> <td>FLD</td> <td>A</td><td>S</td><td>O</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>	FLD	A	S	O																																																											
FLD	A	S	O																																																													
<p>3. If the last protection was DC, "DC" is displayed.</p> <p>Cause: DC output of the power amplifier is abnormal.</p> <p>If the power is turned on during this abnormality, protection is activated after around 5 seconds and the power is turned off.</p>	<table border="1"> <tr> <td>FLD</td> <td>D</td><td>C</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>	FLD	D	C																																																												
FLD	D	C																																																														
<p>4. If the last protection was THERMAL A or B "THERMAL A or B" is displayed.</p> <p>Cause: Abnormal heat sink temperature.</p> <p>If the power is turned on during this abnormality, protection is activated after around 5 seconds and the power is turned off.</p>	<table border="1"> <tr> <td>FLD</td> <td>T</td><td>H</td><td>M</td><td>A</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>FLD</td> <td>T</td><td>H</td><td>M</td><td>B</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>	FLD	T	H	M	A																	FLD	T	H	M	B																																					
FLD	T	H	M	A																																																												
FLD	T	H	M	B																																																												

FLD	Fluorescent Display
-----	---------------------

Caution: These protections may also be activated due to causes such as disconnection of connectors or operations around the microcomputer.

After viewing the above protection history, press the button "STATUS" to return to the normal display.

**Model Information
Index**

Clearing the Protection History

If the unit is in "Protection History Display Mode", just press and hold the **"DISPLAY"** button for 3 seconds. **Note:** If you do not mind erasing your settings from this unit, you can also "Initialized/Micro Reset the unit to clear the Protection History from the unit's memory.

If the unit is not in "Protection History Display Mode", **enter the "Protection History Display Mode":**

Hold down buttons **"STATUS"** and **"ZONE 2 SOURCE"** at the same time and press the power button to turn on the power.

Select the **"2. PROTECTION"** using the **"PRESET +/-"** buttons, and press the **"STATUS"** button.

Press the **"STATUS"** button and the unit will display the Protection History condition.

Press and hold "DISPLAY" for 3 seconds.	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td style="width: 5%;"></td> <td style="width: 5%;">L1</td> <td>P</td><td>R</td><td>O</td><td>T</td><td>E</td><td>C</td><td>T</td><td></td><td></td><td></td><td></td> </tr> <tr> <td style="width: 5%;">FLD</td> <td>L2</td> <td></td><td>H</td><td>I</td><td>S</td><td>T</td><td>O</td><td>R</td><td>Y</td><td></td><td></td><td></td> </tr> <tr> <td></td> <td>L3</td> <td>:</td><td>D</td><td>C</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>		L1	P	R	O	T	E	C	T					FLD	L2		H	I	S	T	O	R	Y					L3	:	D	C								
	L1	P	R	O	T	E	C	T																																
FLD	L2		H	I	S	T	O	R	Y																															
	L3	:	D	C																																				
Press and hold "DISPLAY" for 3 seconds and "CLEAR" is displayed followed by "NO PROTECT" . The unit's Protection History is now cleared.	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td style="width: 5%;"></td> <td style="width: 5%;">FLD</td> <td style="width: 5%;">L3</td> <td>C</td><td>L</td><td>E</td><td>A</td><td>R</td><td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td style="width: 5%;"></td> <td style="width: 5%;">FLD</td> <td style="width: 5%;">L3</td> <td>:</td><td>N</td><td>O</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table>		FLD	L3	C	L	E	A	R							FLD	L3	:	N	O																				
	FLD	L3	C	L	E	A	R																																	
	FLD	L3	:	N	O																																			

Warning Displays by POWER LED

If the power is turned off while a protection is detected, the POWER LED (red) flashes in the following ways as a warning according to the protection status.

- (a) ASO/DC protection: Flashes in 0.5-second cycles (0.25 seconds lit, 0.25 seconds unlit)
- (b) THERMAL (A/B) protection: Flashes in 2-second cycles (1 seconds lit, 1 seconds unlit)

The End

NOTE:

This edition is missing the link to the IR Codes.....12/08/2016

